

SCREW-FIT SKYLIGHT PLEATED BLINDS


MEASURING AND FITTING INSTRUCTIONS

Page 1 of 2


Installing your Skylight Pleated Blind could not be easier!
Please follow the steps below to trim and fit your new blind.

Basic Tools Required

1. Phillips Screwdriver
2. Tape Measure
3. Pencil

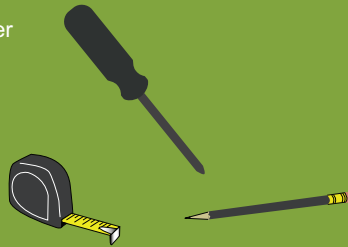


Your Skylight Blind

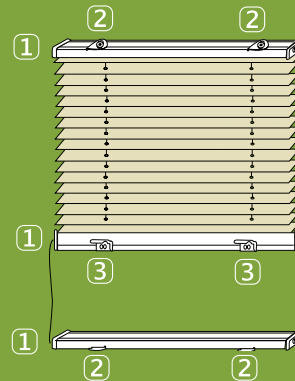


- 1 Aluminium Rails
- 2 Swivel fixing brackets
- 3 Handles


STEP 1

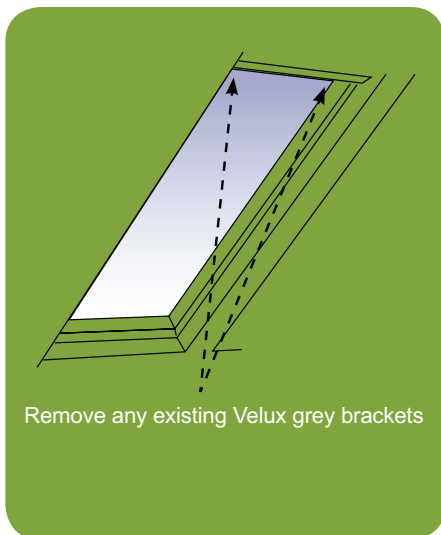


STEP 2

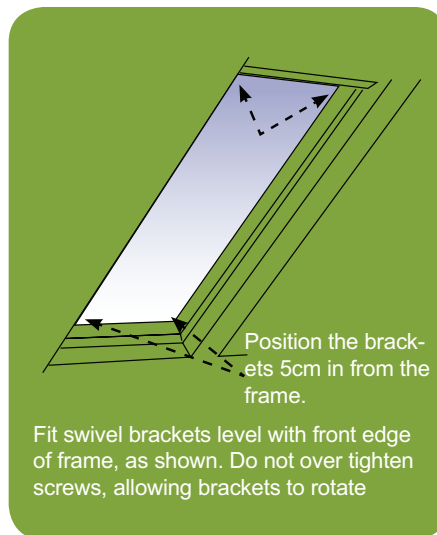


STEP 3

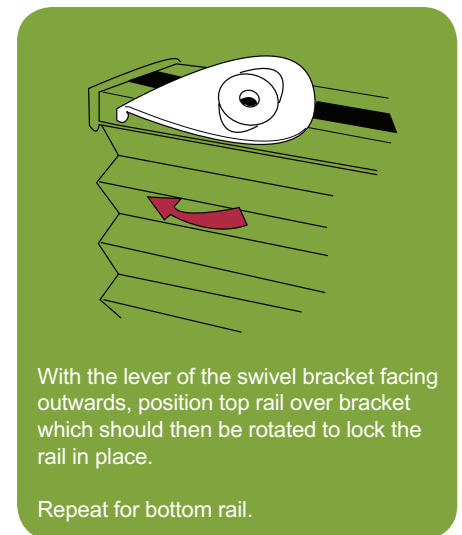

STEP 4

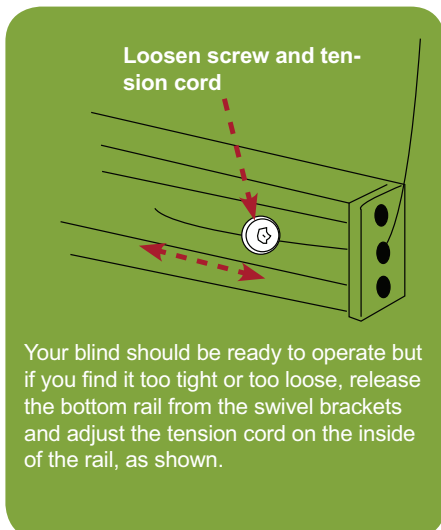

Operating

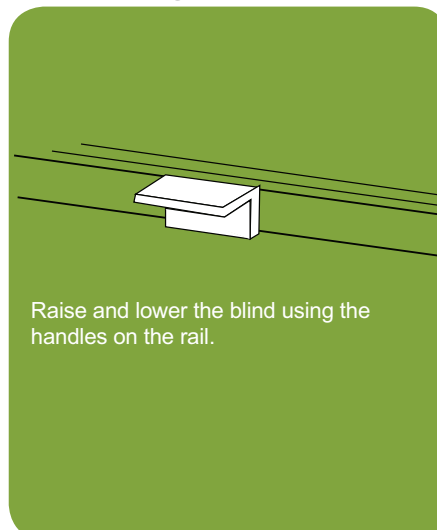

Care

The face side of the fabric can normally be cleaned using a feather duster.

For awkward marks a slightly damp sponge can be used.

DO NOT USE ABRASIVE ACTION.


DO NOT USE SOLVENT CLEANER.

SCREW-FIT SKYLIGHT PLEATED BLINDS

MEASURING AND FITTING INSTRUCTIONS

Page 2 of 2

Velux and Fakro Blind Codes:

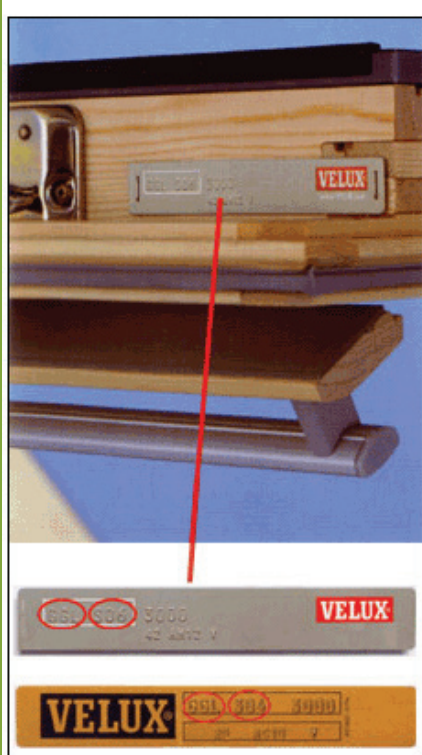

Every VELUX roof window carries a unique data plate that details the type and size of the window. Check your window's reference number.

Every FAKRO roof window carries a data plate that details the size of the window. Check your window's reference number.

